

Attaching of CIOKS CIOKOLATE power supply to a Pedaltrain pedal board

Version 1.0 of 29.10.2012

This document should help you to make the right decisions if you wish to attach a CIOKS CIOKOLATE power supply to a Pedaltrain pedal board. Once you've decided where you wish to place the unit to your pedal board it'd be a good idea also to check out the document that treats the mounting of CIOKS 10 power supply series to Pedaltrain boards since it shows more in detail how to do the attachment as a step-by-step guide.

Considerations before you start

Power supply on top or underneath the pedal board?

The first question is whether you want to have the power supply on top or underneath the board. Top placement gives you easy access to outlets, settings switch, mains power cord, mains voltage selector switch and you always have a clear view on the LED indicators showing you the status of all isolated sections. If there's any kind of faulty situation, like an overload or a shorted cable, you can locate it just by a glance at the LEDs. The CIOKOLATE will also look cool on top of your pedal board. Attaching the unit underneath the board gives you limited access to the mentioned features but gives you more valuable space on top of the pedal board for your pedals.

Space underneath the pedal board

In case of the big pedal board models like Pedaltrain PT-3, PT-PRO or PT-Grande there's plenty of space to mount the CIOKOLATE power supply underneath those boards. Whether you wish top or underneath placement everything to attach the unit to the board is included with the CIOKOLATE, no additional screws needed. In case of the PT-2, PT-1 or PT-JR you'd have to get the Pedal Train Mounting kit (PTkit) to raise the board to fit the power supply underneath like it's also necessary with the DC10 or AC10 models.


Flex cables length

When planning where to attach the power supply to your Pedaltrain board in terms left, middle, right you must take into consideration the lengths of the Flex cables, both those which were included with your unit and those you can buy additionally. Make sure they all can reach from the right outlet of the power supply to the input socket of the particular pedal. This consideration is crucial with the bigger pedal boards like the PT-PRO or PT-Grande. All Flex cable types are available in 30 and 50cm length where type 1 (black, BOSS standard) and type 4 (green, for Eventides or ex. 24V EHX pedals) are also obtainable in 80cm length. Now where the new Extension Flex is also obtainable you can get an extra 50cm on any Flex cable to reach the most far away pedals from the power supply.


What is included with the CIOKOLATE?

With the power supply unit you get two mounting brackets, four screws and a hex key to attach the brackets to the power supply and a set of self tapping screws with spring washers to attach the brackets to the pedal board. All these parts are shown on the picture on the next page. For the self tapping screws you should use a screwdriver with PZ2 bit.

CIOKS CIOKOLATE on top or underneath Pedaltrain.

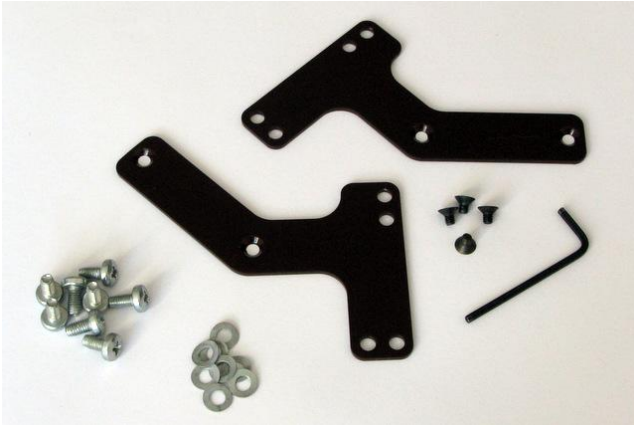


The two brackets can be attached to the CIOKOLATE power supply in quite many different ways as shown on the four pictures below. Other combinations not shown are also possible. This changes the position of mounting hole pairs to be used to attach the brackets to the pedal board giving many different options for mounting also to pedal boards of other types than Pedaltrain. CIOKOLATE power supply is fitted with six detachable rubber feet which should be removed prior to mounting of the power supply to a pedal board using the included brackets. On the pictures in the rest of this document the holes are not drilled and screws not in place. We just show how to attach the brackets to the power supply and where to attach the brackets to the pedal board. Since the aluminium bars are quite thin we recommend using all 8 screws or at least 6 to obtain a durable fixture. You should use a $\varnothing 4\text{mm}$ drill for the included self tapping screws.

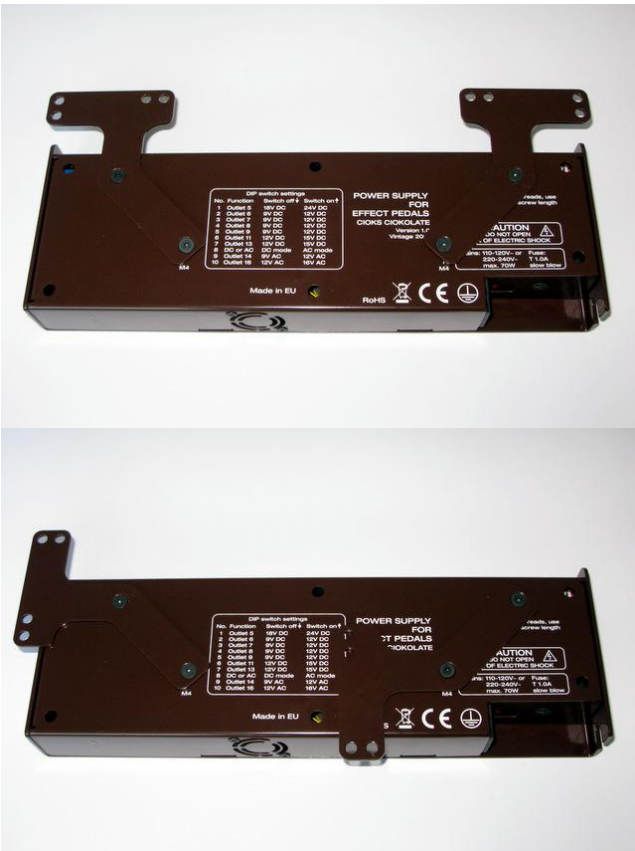

CIOKS CIOKOLATE on top or underneath Pedaltrain.

On top of any Pedaltrain model

If you wish to place the CIOKOLATE power supply on top of your Pedaltrain pedal board the procedure will be the same no matter which model you have as long it's the PT-JR or a bigger model. On the following pictures you see the CIOKOLATE placed on the left side of the PT-3 board. Other placements like in the middle or on the right are of course also possible.

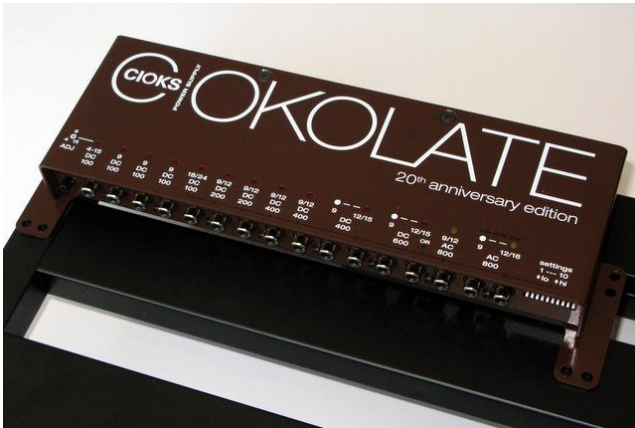

Underneath Pedaltrain PT-3

Following four pictures show the attachment underneath a Pedaltrain PT-3 pedal board.



CIOKS CIOKOLATE on top or underneath Pedaltrain.



Underneath Pedaltrain PT-PRO

The last four pictures show the attachment underneath a Pedaltrain PT-PRO pedal board.

